

CF-8509-I & CF-8609-I Single Hole Lavatory Faucet Installation Instructions


CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

IMPORTANT: Read all instructions prior to installation and provide copy of instructions to consumer.

Operating Specifications:

Recommended Supply Pressure: 20 to 70 psi*

* If water pressure exceeds 70 psi, install a Pressure-Reducing Valve (PRV).

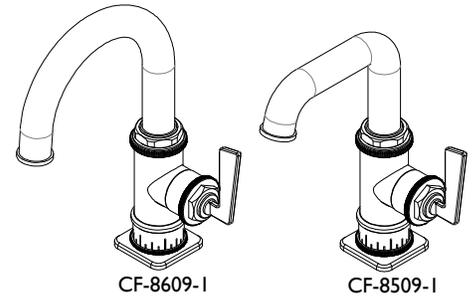


I INSTALLING FAUCET TO SINK/DECK

- Insert O-RING (2) into bottom of BASE (1a)
- Position COINED RING (1b) on top of BASE (1a), place RISER (1c) on top of COINED RING (1b), position SMOOTH RING (1d) on top of RISER (1c).
- Confirm orientation of RISER (1c); hash marks at bottom as shown
- Place parts over sink/deck THROUGH-HOLE (3)

NOTE: Recommended sink/deck THROUGH-HOLE is $\varnothing 1-3/8"$


- Insert FLEX HOSE (5) (one at a time) and THREADED ROD (6) through BASE ASSEMBLY (1) and sink/deck THROUGH-HOLE (3)
- Place BODY (4) on top of BASE ASSEMBLY (1)
- From underside of sink/deck THROUGH-HOLE (3), place MOUNTING BRACKET (7) and NUT (8) onto THREADED ROD (6)
- Adjust positioning so MOUNTING BRACKET (7) contacts sink/deck on all sides
- Tighten NUT (8) until BODY (4) and BASE ASSEMBLY (1) are secure to sink/deck

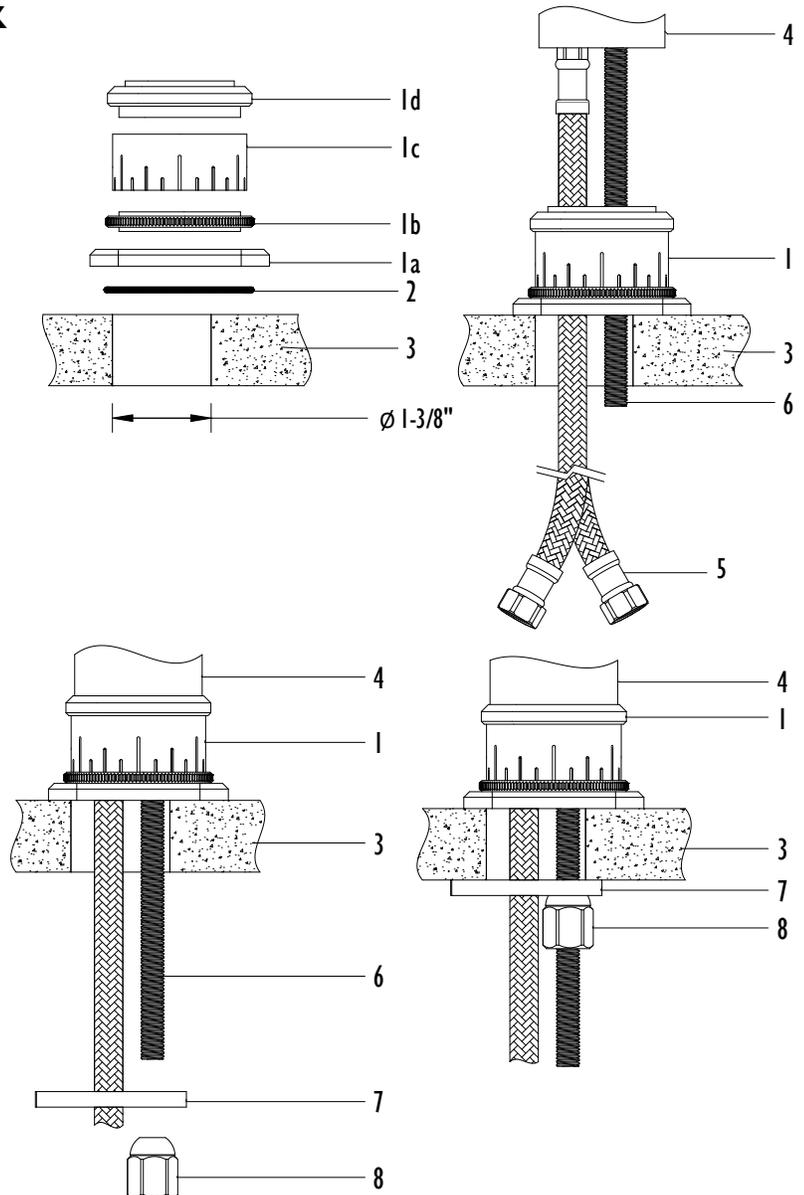

2

SPOUT ALIGNMENT

- Rotate SPOUT (10) to final position
- Raise decorative COVER (9) to expose SETSCREW (12)
- Tighten SETSCREW (12) with ALLEN KEY (11) until SPOUT (10) is secure
- Lower decorative COVER (9) to hide SETSCREW (12)

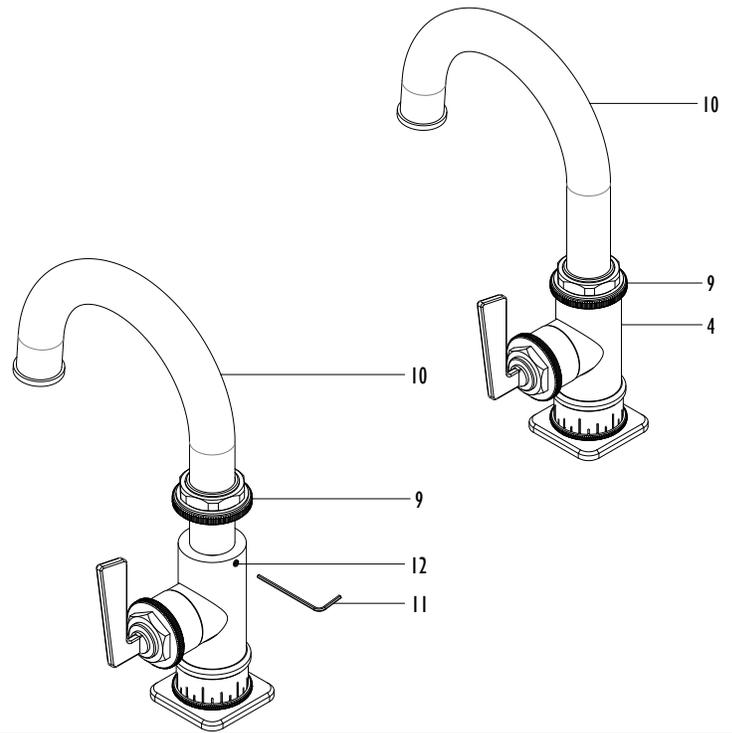

3


INSTALLING DRAIN

- Slide white foam WASHER (19) up under flange of BODY (14)

- or -

Apply thin film of Silicon® sealant (or equivalent – DO NOT use petroleum-based sealant as this WILL void finish warranty) to underside of flange on BODY (14)

- Insert BODY (14) down through sink drain HOLE (20)
- From underside, slide MACH-WASHER (15) and FRICTION-WASHER (15a) up onto BODY (14)
- Secure BODY (14) into place with flange NUT (16)
- Apply Teflon® tape (18) (not supplied) to threaded portion of TAILPIECE (17) & tighten onto BODY (14)

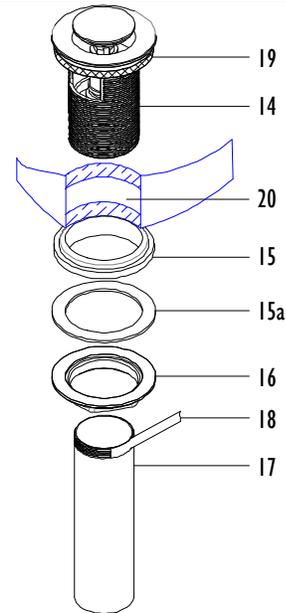

4

SUPPLY CONNECTIONS

- Connect blue colored FLEX HOSE (5) to cold SUPPLY VALVE (13) and red colored FLEX HOSE (5) to hot SUPPLY VALVE (13)

IMPORTANT: Flush supply lines and valves prior to installation to prevent damage and malfunction of cartridge

- Turn on cold and hot SUPPLY VALVES (13)
- Slowly rotate faucet lever to allow water flow
- Check all connections for leaks and repair as necessary
- Give these instructions and Blue Plastic Aerator Key to consumer for safe keeping

NOTE: Occasionally, due to water conditions it may be necessary to remove aerator and clean debris off with soft bristle toothbrush

