

LIVING DISTRICT

Collection:TOUREG


Installation manual for

LD8100D16 D16" H18" L6

Installation instructions:

1. Hang the chain (01) on the ceiling.
2. Fix the long iron branch (03) and short iron branch (04) alternately on the lamp body (02).
3. Hang the lamp body (02) on the chain (01).
4. Connect the lamp main wire with the positive and negative of 4" junction box .
5. As the crystal dressing instruction, hang the crystal parts.

The end!

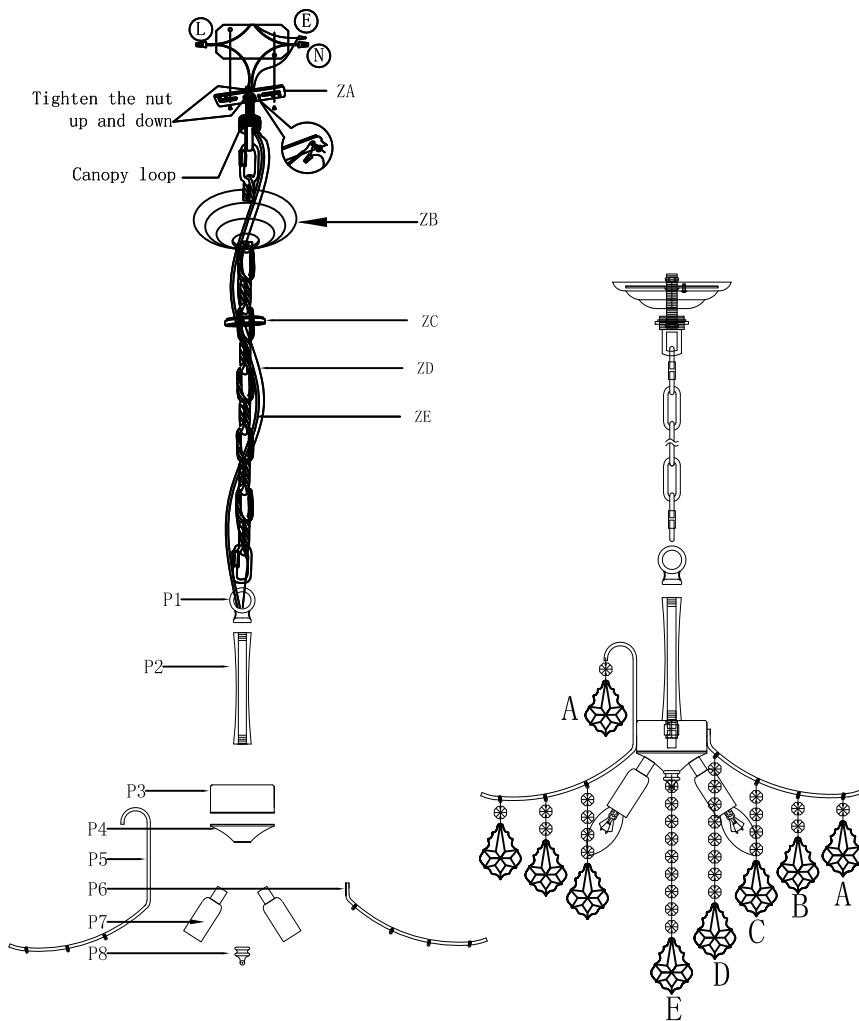

PARTS LIST

| part | picture | Description | Qty | Check list |
|------|---------|-------------------------------|-----|------------|
| ZA | | 4" Mounting bracket | 1 | |
| ZB | | 5.3" Canopy cover | 1 | |
| ZC | | Canopy ring | 1 | |
| ZD | | L59" CHAIN05T Twist Design | 1 | |
| ZE | | Power Cord 12' SPT-1-18# | 1 | |
| P1 | | Loop | 1 | |
| P2 | | 5.5" Metal column | 1 | |
| P3 | | 3" Metal wire box | 1 | |
| P4 | | 3" Metal cover | 1 | |
| P5 | | 7" Iron branch | 6 | |
| P6 | | 7" Iron branch | 6 | |
| P7 | | E12 Lampholder | 6 | |
| P8 | | Finial | 1 | |
| A | | 1050-14#*911-2.5" | 18 | |
| B | | 1050-14#*2+911-2.5" | 12 | |
| C | | 1050-14#*4+911-2.5" | 12 | |
| D | | 1050-14#*8+911-2.5" | 6 | |
| E | | 1050-14#*9+911-2.5" | 1 | |
| | | | | |

"L" = Hot wire

"N" = Neutral wire

"E" = Ground wire