




			Stainless (Non- Plumbers Putty	-Staining)
Record your model number below for future reference:	Important Information For new installations, assemble the faucet to the sink before installing the sink. Observe all local codes. Shut off the water supply.	Do not use petroleum-based plumbers putty on marble or stone surfaces.	1 Clean the sink surface.	2 Install the gasket to the underside of the spout.
3 Insert the spout.	4 Slide the washer onto the shank.	5 Partially thread the screws into the	6 Ensure the O-ring is installed to	7 Insert the "COLD" handle on the
	Secure with the nut.	rings.	the underside of the handles.	right and the other handle on the left.
8 Loosely secure the handles with the washers and threaded rings.	9 Turn the handles to the OFF position.	10 Position the screws to the front and back. Tighten to secure.	11 Connect the provided hoses to the valves.	12 Insert the washer and gasket into the tee. Thread the tee onto the shank.
13 Connect the hoses to the tee.	14 Install the lift rod.	15 Disassemble the drain. Apply plumbers putty to the underside of the flange.	16 Install the flange. Tighten the nut. Wipe away excess plumbers putty.	17 Insert the rod and tighten the nut.
		Stainless (Non-Staining) Plumbers Putty		

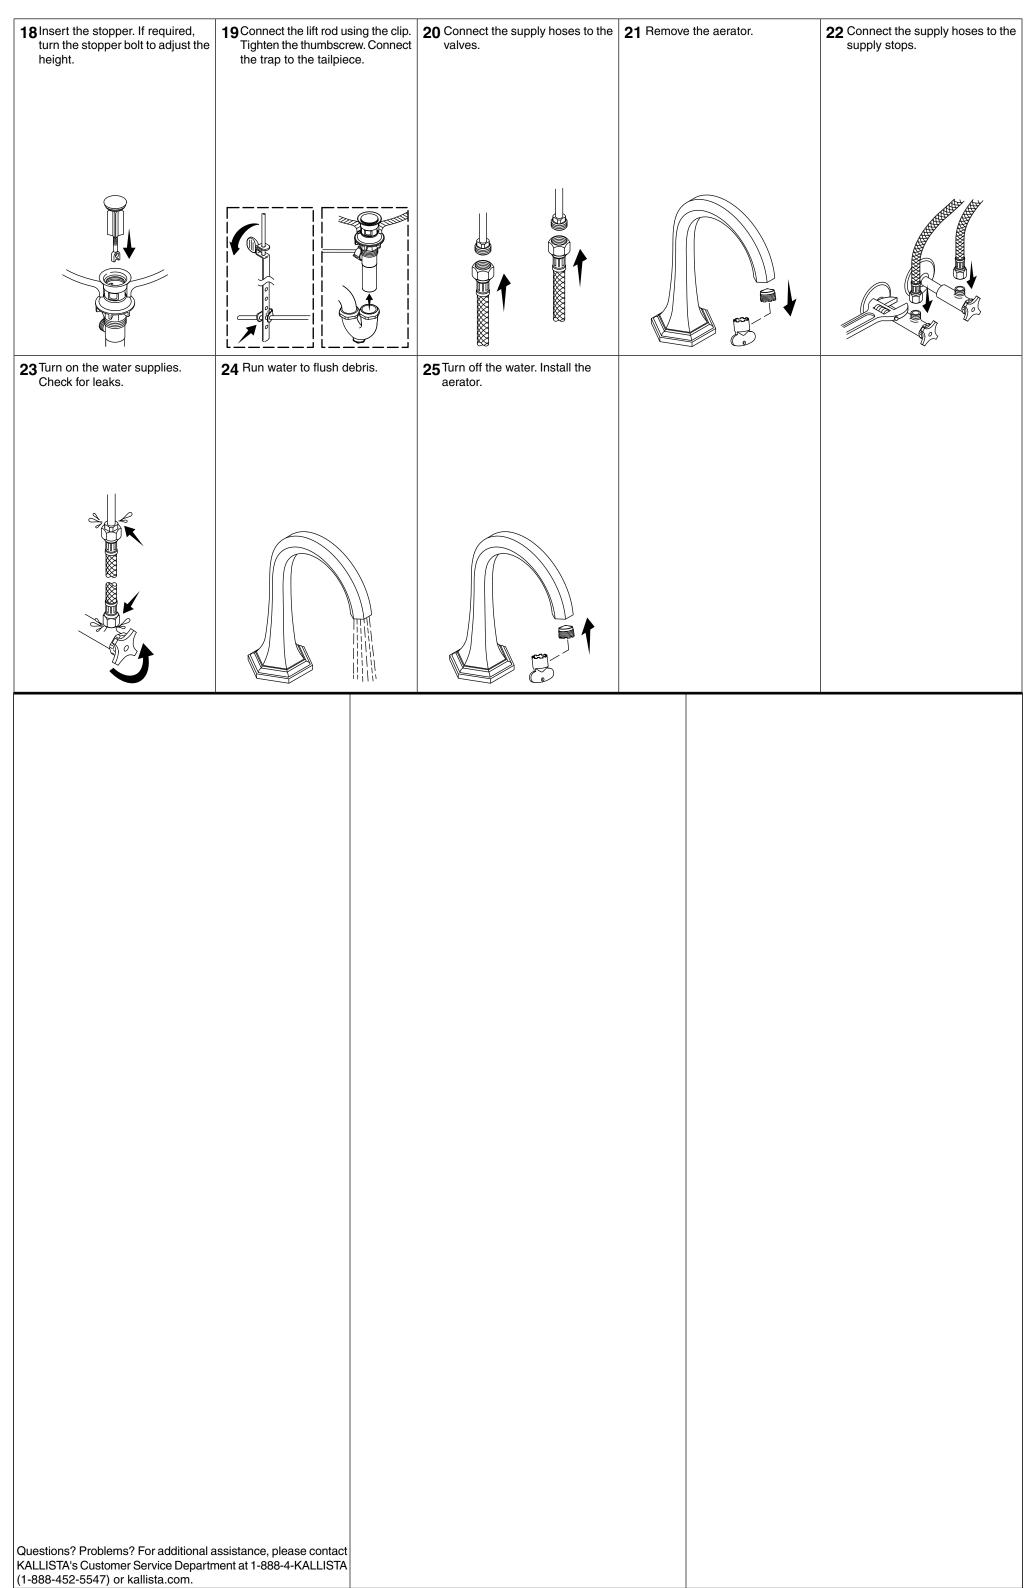

1295206-2-**A** © 2017 KALLISTA