


INSTALLATION INSTRUCTIONS

Y1-4505


13" SHOWER PROJECTION ARM

Y1-4503

20" SHOWER PROJECTION ARM

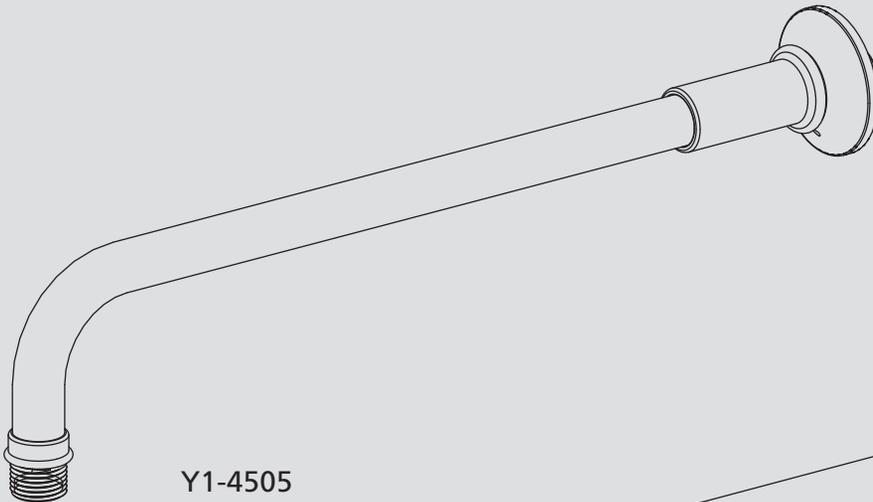

Y1-4505

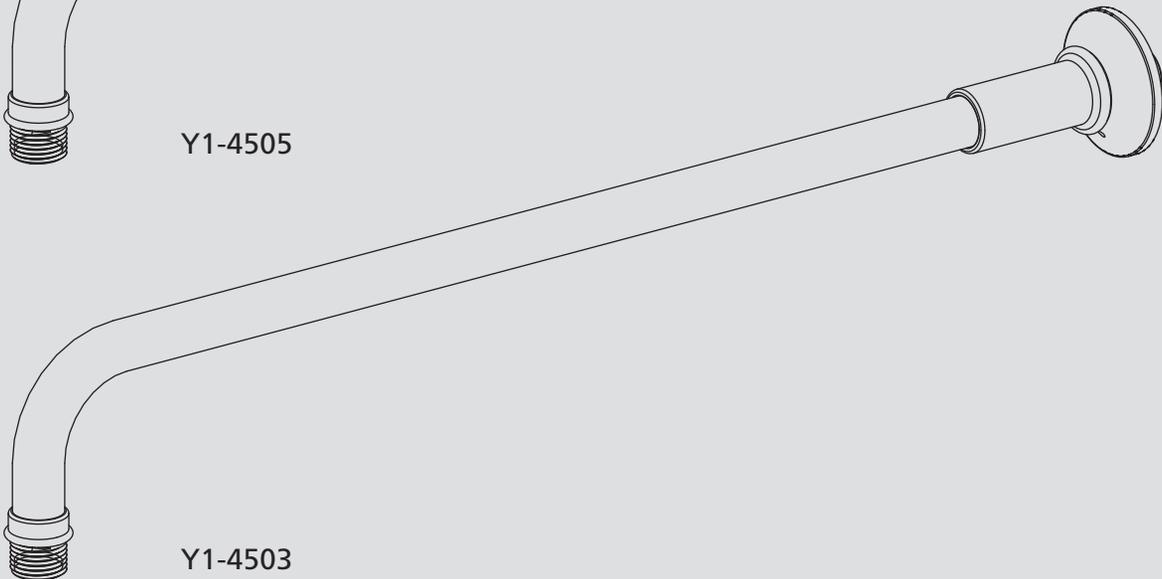


Y1-4503

What you need to know

Tools:

Adjustable Wrench
Groove Joint Pliers
Hacksaw
Phillips Screwdriver
Pipe Tape
Spatula
Spirit Level

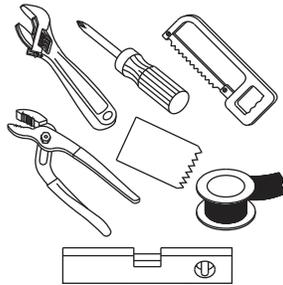

Safety Tips

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

Things You May Need

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

Standards

Meets Meets A112.18.1

Maintenance

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

Important Points

Prior to beginning installation, turn off the cold and hot water lines and open the old faucet to release built-up pressure.




Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licensed plumber.

Steps 1-3

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

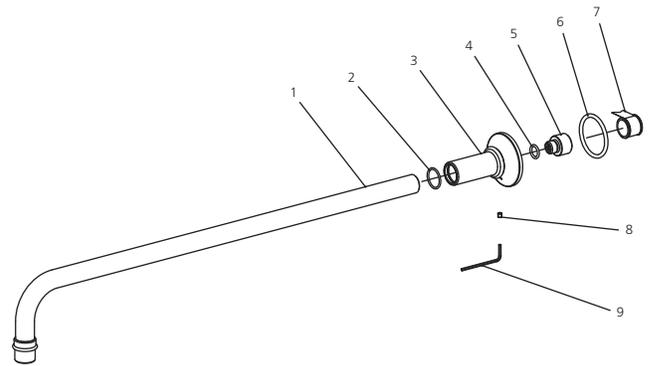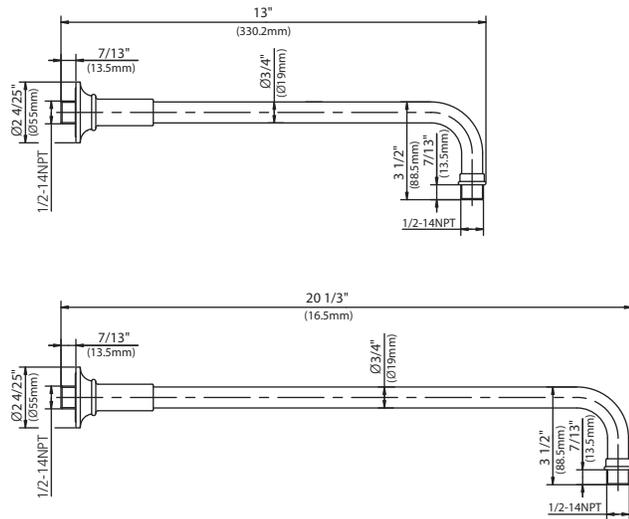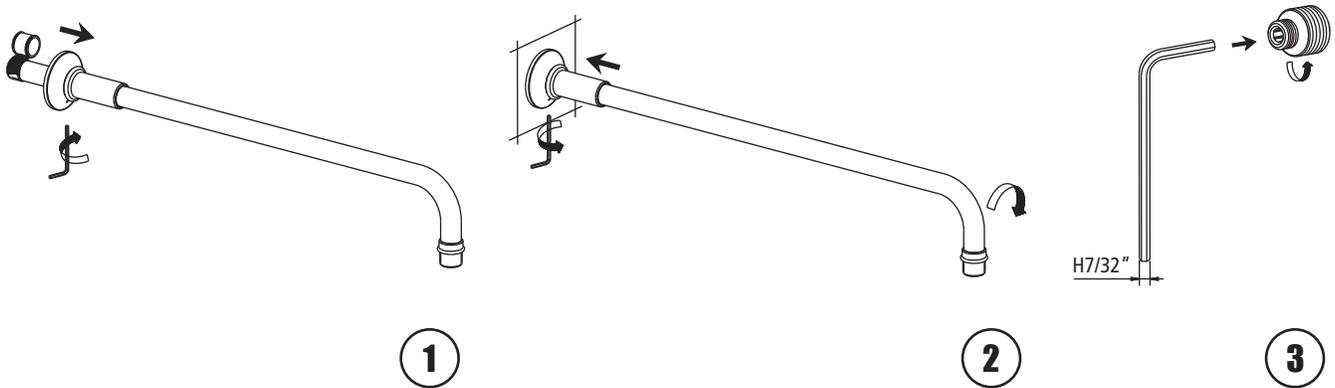

- | | |
|---|-----------------------------|
| 1 Shower arm ((20" = 020347, 13" = 020326)) | 5 Threaded adaptor (057394) |
| 2 O-ring (004574R) | 6 O-ring (004098) |
| 3 Escutcheon (071032) | 7 Teflon tape (203000) |
| 4 O-ring (063022N) | 8 Set screw (065021) |
| | 9 Allen wrench (031003) |

1 Loosen the set screw by Allen key. Slide the escutcheon up the shower arm to leave a space at the back end for installation. Then apply Teflon tape to the threads.

2 Thread the shower arm onto the pipe. Slide the escutcheon over the shower arm until it presses against the wall. Finally, retighten the set screw with Allen key.

3 **Trouble shooting!**
In case the threaded adaptor is left on the pipe when you are disassembling the arm from the wall, use wrench to remove it from the wall.

For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



L E F R O Y B R O O K S

www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385
TELEPHONE: 718-302-5292. FAX: 718-302-4177

The use of trademarks, product design and artwork is subject to licence or agreement with Christo A. Lefroy Brooks. The design registrations, trademark registrations and copyrights are protected by law and the use or reproduction outside the terms of an agreement is prohibited. The right to modify designs and dimensions is reserved. Christo Lefroy Brooks is a member of ACID (Anti Copying in Design).

©CHRISTO A. LEFROY BROOKS 2009