


$\mid A \mid$		#4	1pcs	В		M6	2pcs	C	6	M6*25	2pcs
---------------	--	----	------	---	--	----	------	---	----------	-------	------

Step 1:

Attach armrest to backrest by inserting screw C along with washer B through the connector plate then tighten it with Allen wrench A.Repeat the process on the other side.

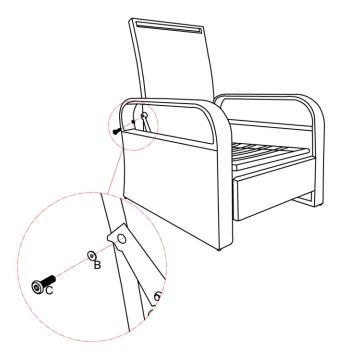

Step 2:

Place the cushion on seat and enjoy your lounger chair.



www.matriximportsusa.com

[&]quot;Assembly videos available at: youtube.com/matriximportsusa"