




ASSEMBLY INSTRUCTIONS -- Model 98-B3400

1. Remove parts from carton.
2. Attach the two fixed length arms to the canopy by removing the lock nuts. Thread the arm into the bracket on the underside of the canopy. Secure with lock nut.
3. The adjustable arm is supplied with the spring, cup nut, and lock nut attached. Remove these pieces and set aside. Pass the arm through the canopy. Slide on the spring and then screw on the cup nut. Pass the arm through the bracket on the underside of the canopy and install lock nut. The cup nut is user adjusted to allow how far the arm can be pulled outward to fit the glass shade.

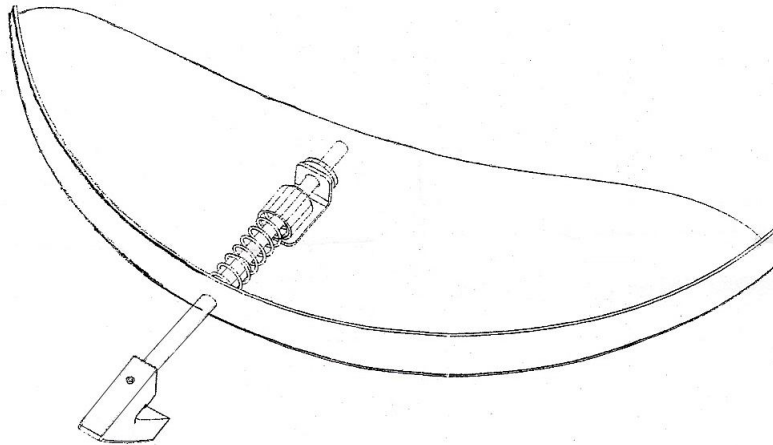

INSTALLATION INSTRUCTIONS

CAUTION: RISK OF FIRE OR SHOCK. DISCONNECT ALL POWER FROM OUTLET BOX
BEFORE INSTALLATION

4. Attach the bracket bar to the outlet box.
5. Make electrical connections in accordance with all applicable local codes.
6. Place fixture over threaded nipple (center of bracket bar) and secure with capnut.
7. Install maximum 60 Watt bulbs according to relamping label on fixture. We strongly recommend compact fluorescent (CFL) bulbs in this fixture because they emit less heat, consume far less electricity, and last longer than conventional bulbs.
8. Restore power to outlet box.