

Assembly Instruction Sheet #IS-QR1419PN_R1 For Style QR1419PN

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.


Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, gloves, safety glasses.

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the mirror. Contact customer service for replacement parts.

Δ Warnings and Cautions


These instructions are provided for your safety. It is very important you read them completely before installing the mirror. We strongly recommend that a licensed, professional electrician perform the installation. Quoizel recommends 2 people for each step during assembly.

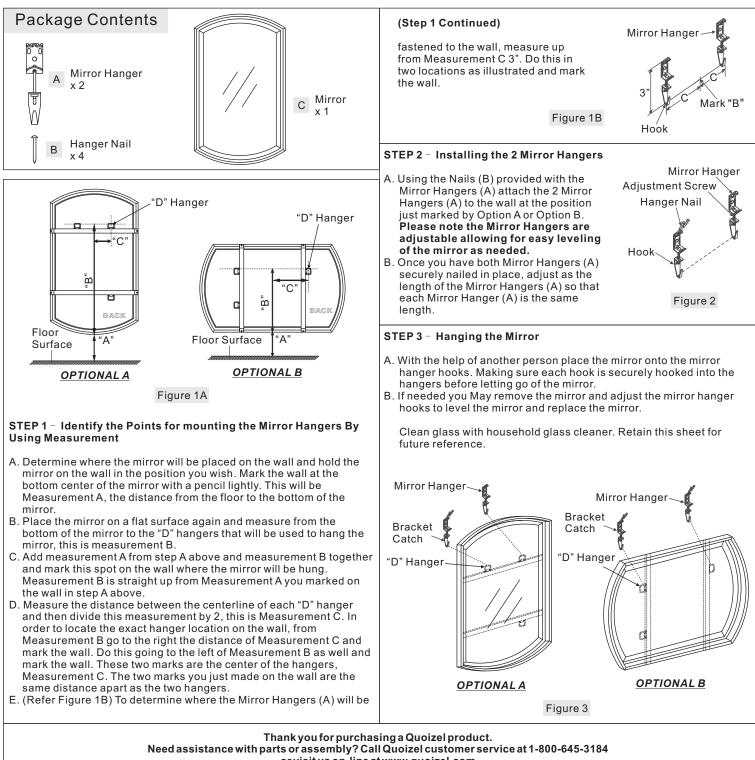

© 2017 Quoizel Inc.

or visit us on-line at www.quoizel.com

Revised Date: 2017-06-29

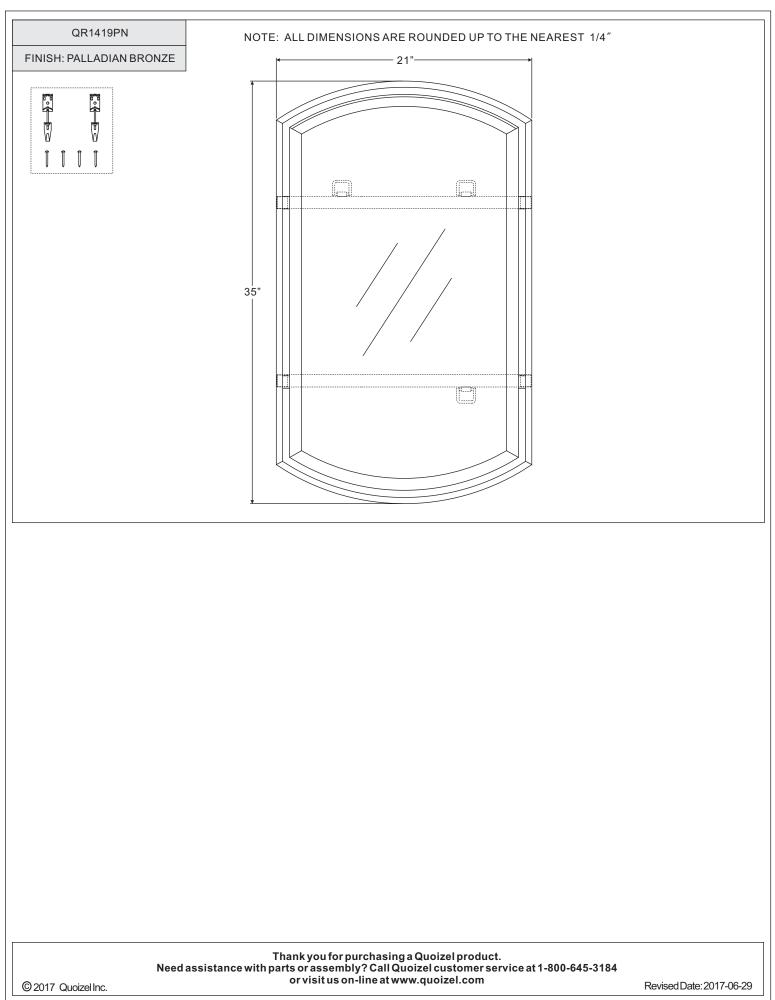

2of2